


AUDIOVECTOR




AUDIOVECTOR K-X

JUST LISTEN


AUDIOVECTOR



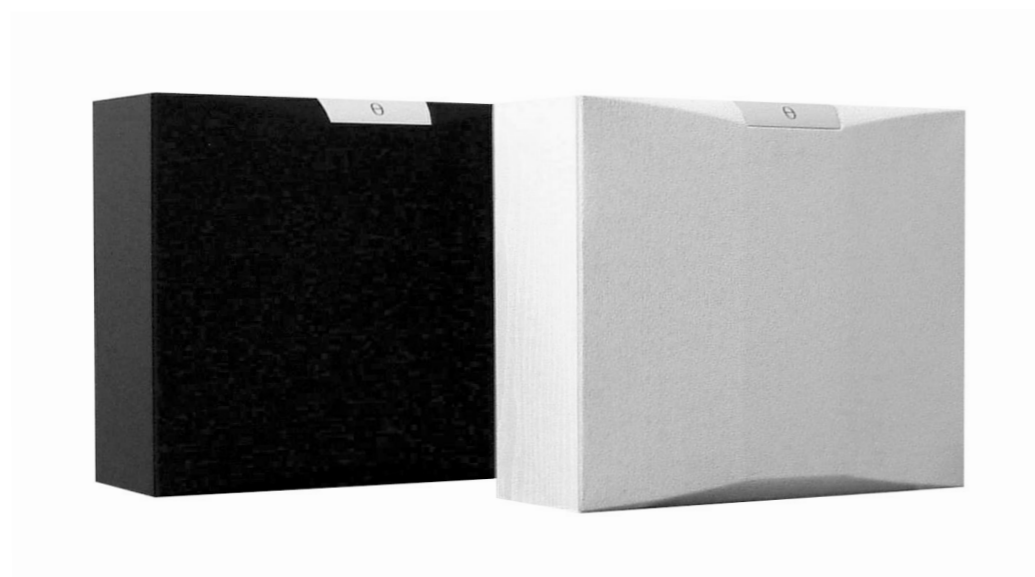

THANK YOU FOR CHOOSING AUDIOVECTOR SPEAKERS.

We are sure that your new speakers will give you thrilling experiences with music and film for many years to come. We also know that the unique Individual Upgrade Concept (IUC) gives you the possibility to upgrade your speakers in the future if/when you prefer it.

The IUC serves to make sure that you always have cutting edge technology in your sound reproduction system.



1 UNPACKING

Please make sure that your speakers are placed on a soft surface while you unpack them. We recommend that you keep the cartons for later use.

2 THE AUDIOVECTOR K-X – A UNIVERSAL SPEAKER.

The K-X is extremely compact and stylish. This, along with its flexible concept, means that it can be used for a variety of different purposes with a very good result:

- as a rear speaker for Dolby Surround Home Cinema (in Dipole mode)
- as a rear speaker for DTS/AC3 Home Cinema (in direct field mode)
- as a center speaker (it is fully shielded)
- as a full Home Cinema speaker package (the dynamics are there)
- as extra speaker in dens, offices, and other rooms, etc.

3 POSITIONING OF THE AUDIOVECTOR K-X

The K-X can be placed on either a flat wall, on a shelf, or in a bookshelf.

- When used on a flat wall, use wall anchors and screws (not supplied) to make sure that the Speaker is securely fixed and will stay that way. Distance between screws: 190 mm.



Mount one self adhesive foot in each lower corner. This will enable you to position the K-X in parallel with the wall.

- If you prefer to use the K-X on or in a shelf, please mount all four feet in the corner of the bottom of the K-X. This will protect the surface underneath and prevent rattling.

4 CONNECTION OF THE AUDIOVECTOR K-X

The K-X has a bi-wire terminal. The left terminal set (seen from the front) is for the »extra« tweeter, which only works in the dipole mode, which is the correct mode for Dolby Surround.

The K-X is supplied connected in the »direct field mode« which is the correct mode for all other purposes than Dolby Surround (DTS, AC3). Use only the right terminal pair for DTS and AC3. This means that the extra tweeter is disconnected. To connect it, install the extra link supplied between the remaining two terminals. This is the correct mode for Dolby Surround.



5 MAINTENANCE OF THE AUDIOVECTOR K-X.

Do not expose to excessive heat or direct sunlight for longer period of time. Use a damp cotton cloth to clean the surface of the K-X. That is all you need.

WARRANTY.
Please contact your local distributor for information about the warranty in your country.